

CS2-Wiring Diagram (Magnet-Based)

Note: Do not allow any circuit to be completed between the RTN output of the the Valve connector and the 120v Safety Ground (including the frame of the boom) This causes catastrophic damage to the main circuit board on power-up!

